

NEVER LEAVE YOUR VAPIRRISE UNATTENDED & DO NOT TOUCH HOT SURFACES AT ANY TIME (For Further Safety Mechanisms Refer to Page 4 of User Guide)

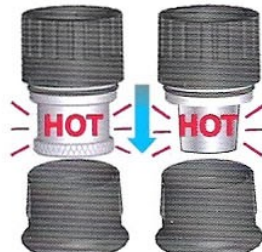
A. PRE-USAGE & SAFETY RECOMMENDATIONS:



A1. Unwrap HEPA Filter & Install



A2. CAUTION: High Temperature

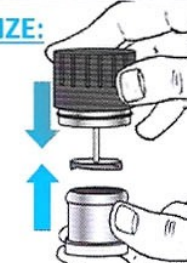


A3. Always Use Hot Chamber Grabber with ANY Hot Surface

B. PREPARING TO VAPORIZE:



B1. Grind Herbs and Fill Herb Chamber



B2. Securely Snap Your Herb Chamber into Place



B3. Pre-assembled Chamber Adapter is Ready to Use!

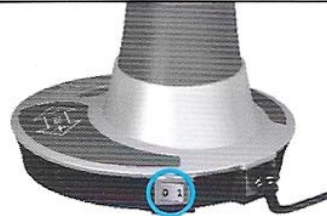
C. SINGLE-USER INHALATION:



C1. Attach Tube & Mouthpiece to Inhalation Adapter



C2. Insert Inhalation Adapter into Herb Chamber



C3. Power on VapirRise®



C4. Set the Temperature



C5. Press Heat Button... Green Light = Ready to Vaporize



C6. Set the Fan to Desired Speed



C7. Insert the Pre-Assembled Chamber Adapter... Inhale & Enjoy!

D. MULTI-USER INHALATION:



D1. Open Only the Valves for Usage on Multi-User Adapter



D2. Attach Tubes Per Open Valves & Insert into Pre-assembled Chamber Adapter

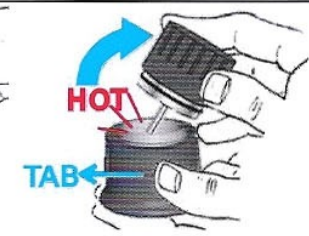


D3. Insert Multi-User Assembly into Pre-heated Unit, Set Fan Speed & Inhale!

REFILL:





1. To Refill, ALWAYS Use HOT Chamber Grabber




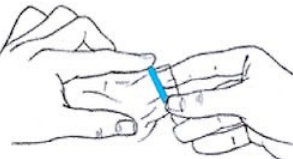
2. Squeeze Tabs to Hold Chamber, Pull Chamber Adapter to One Side to Open

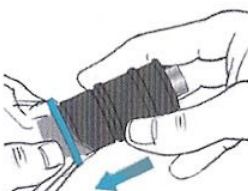
NEVER LEAVE YOUR VAPIRRISE UNATTENDED & DO NOT TOUCH HOT SURFACES AT ANY TIME (For Further Safety Mechanisms Refer to Page 4 of User Guide)


- 

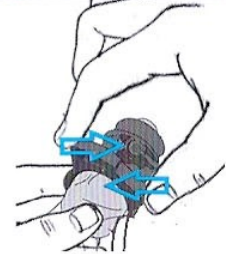
1. Grind Herbs and Fill Herb Chamber
- 

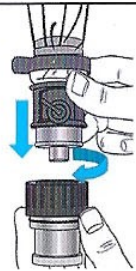
2. Securely Snap Your Herb Chamber into Place
- 


3. Remove Blue O-Ring
- 

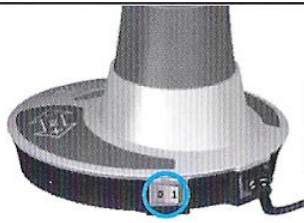
4. Place O-Ring Around Balloon Opening
- 

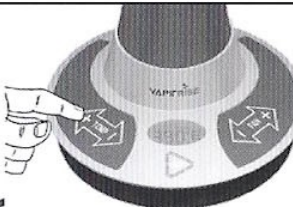
5. Insert Balloon Adapter into Balloon Opening
- 


6. Roll O-Ring into Middle Groove and Fold Excess Balloon Material Over O-Ring
- 


7. Squeeze Balloon Clamp Around Balloon Neck
- 


8. Insert Balloon Adapter into Herb Chamber & Twist
- 

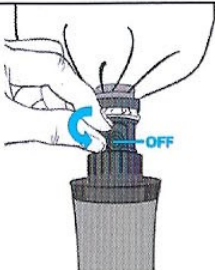
9. Move Valve to ON... Inflation Assembly is Completed
- 

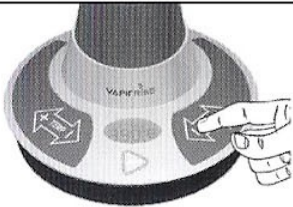
10. Power on VapirRise®
- 

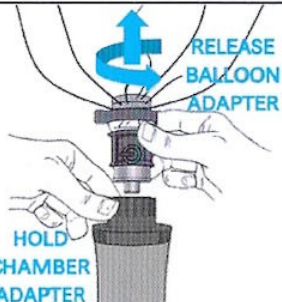
11. Set the Desired Temperature
- 

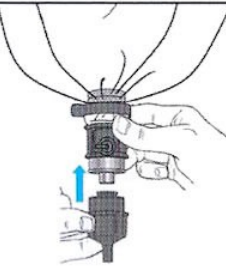
12. Press Heat Button... Green Light = Ready to Vaporize
- 

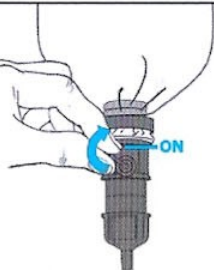
13. Insert Inflation Assembly into Heat Chamber
- 


14. Set Fan to Desired Speed
- 

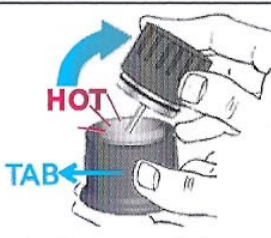
15. When Balloon Inflated, Turn the Valve to OFF
- 

16. Set Fan Speed to Zero
- 

17. Remove Balloon Adapter
- 

18. Attach Inhalation Adapter
- 

19. Move Balloon Valve to ON... Inhale & Enjoy!
- 

REFILL:
1. To Refill, ALWAYS Use HOT Chamber Grabber
- 

2. Squeeze Tabs to Hold Chamber, Pull Chamber Adapter to One Side to Open